
























G5  4 x 13 x8	A1  ø7 x 50 x4	E16  96mm x2	S1  x1
K1  ø15 x 12 x12	K5  x12	P1  x4	F1  x8
G16  4 x 27 x4	B1  ø8 x 35 x20	C5  Z35R0 x4	D5  PZ35R0 x4
			W2  x1





IV




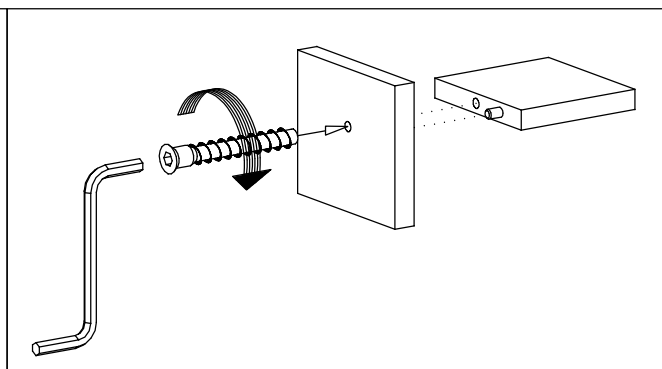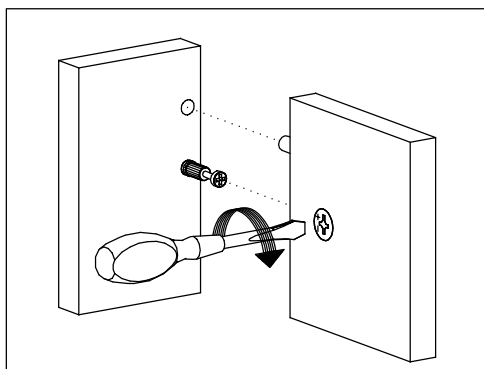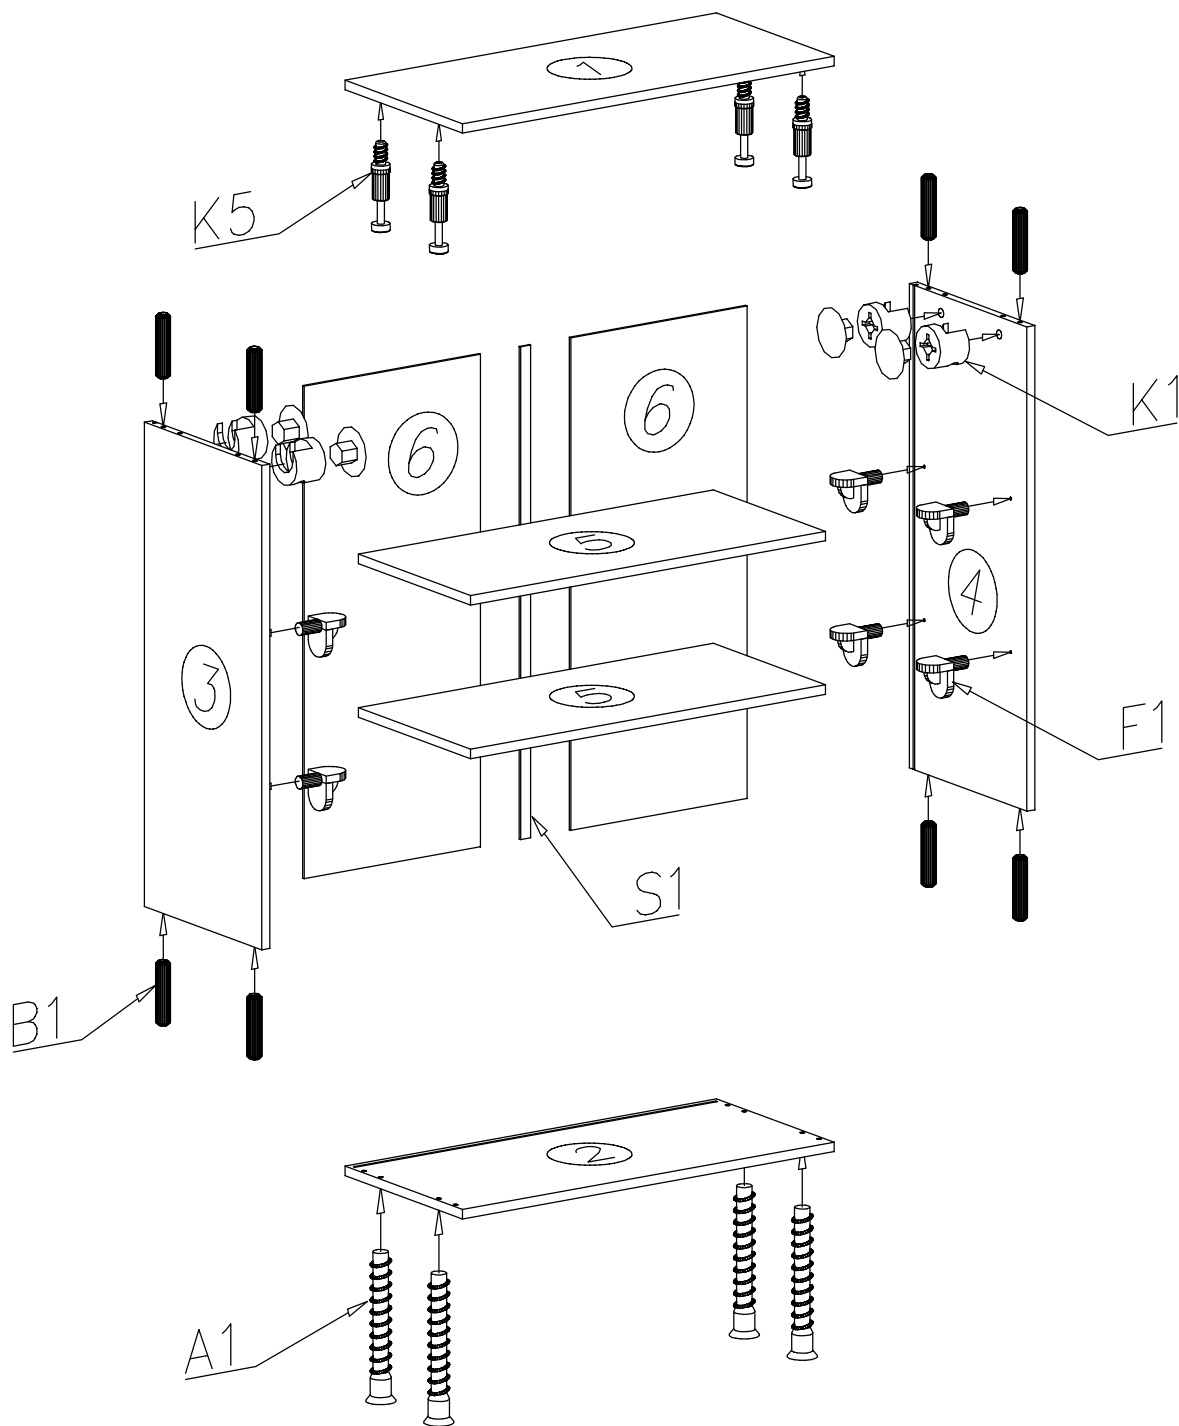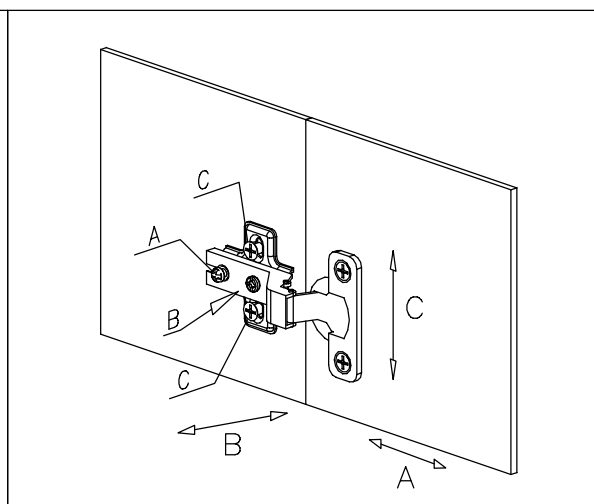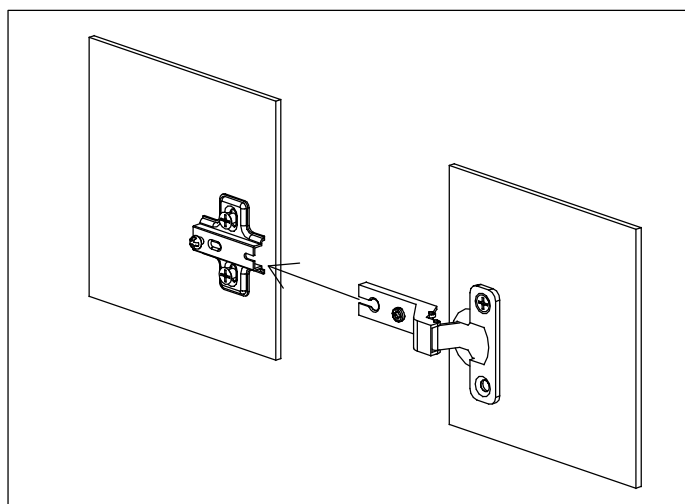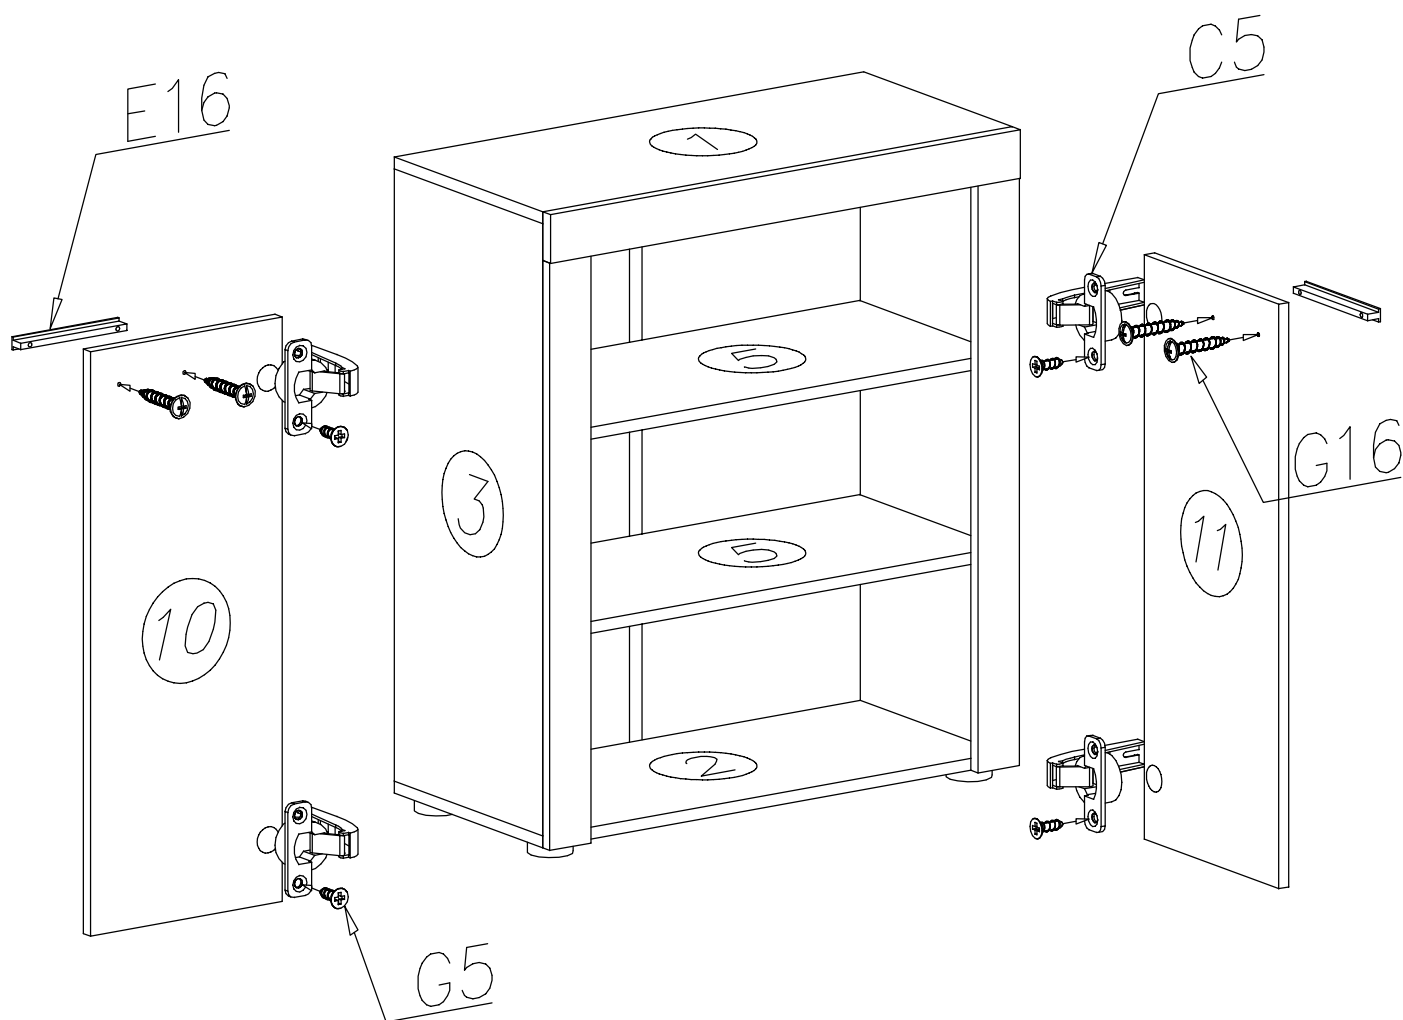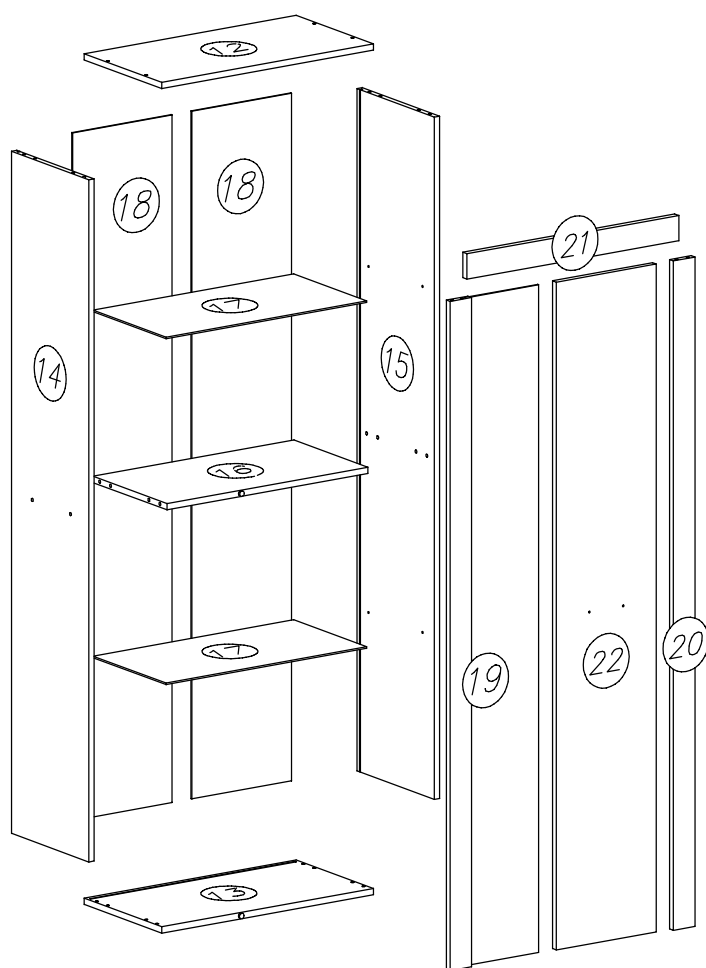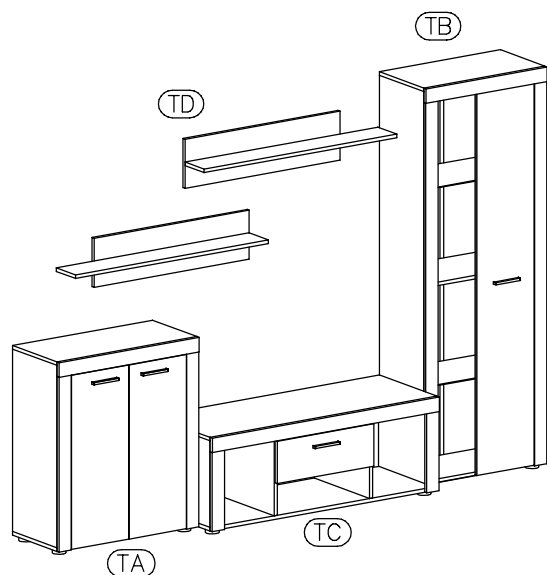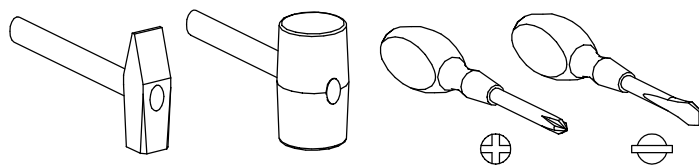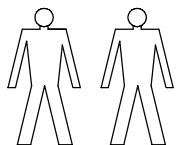



G5 4 x 13 x8 	A1 ø7 x 50 x12 	E16 96mm x1 	S1 x1
K1 ø15 x 12 x10 	K5 x10 	P1 x4 	F2 x8
G16 4 x 27 x2 	B1 ø8 x 35 x26 	C5 Z35R0 x4 	D5 PZ35R0 x4
			W2 x1

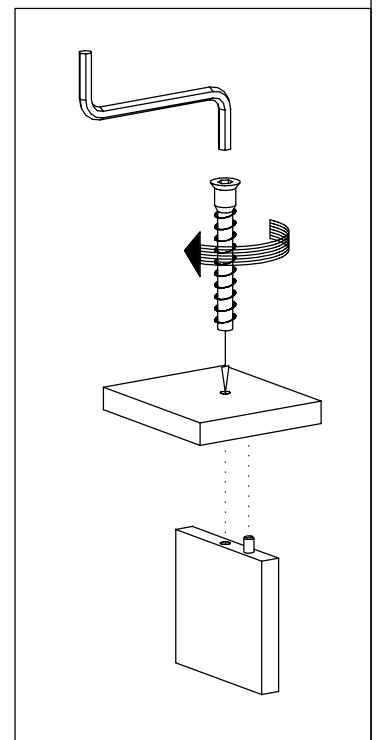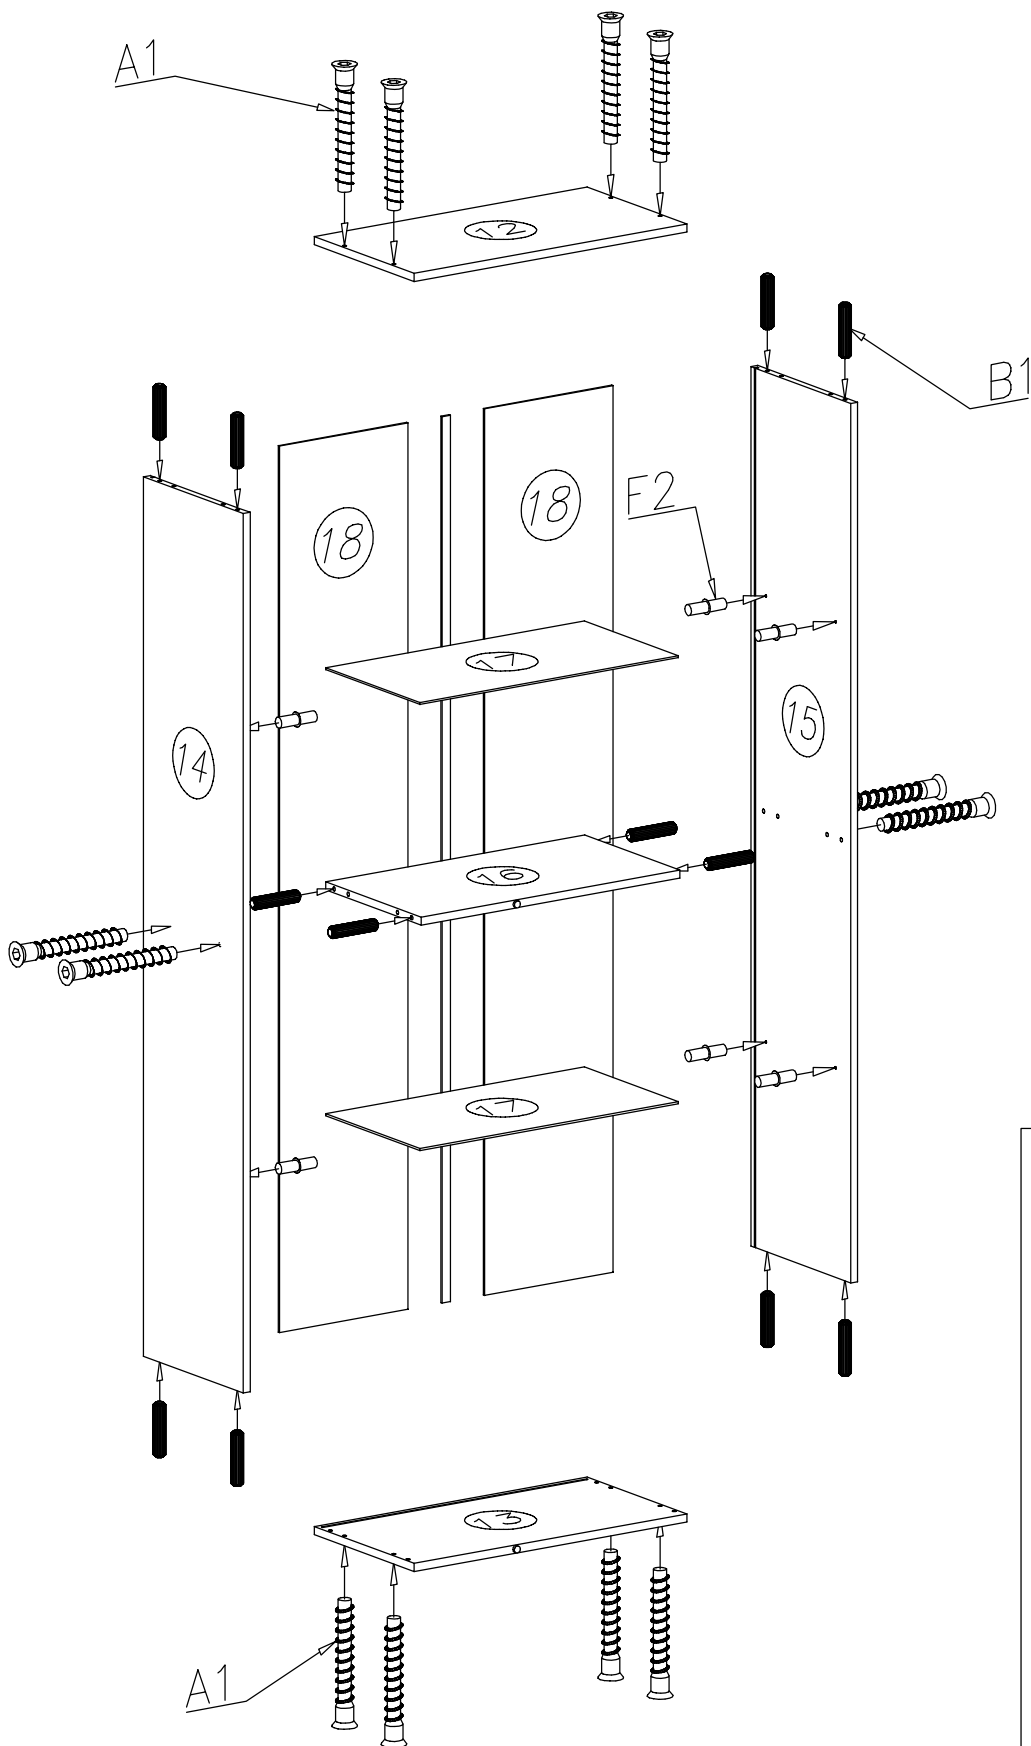



||

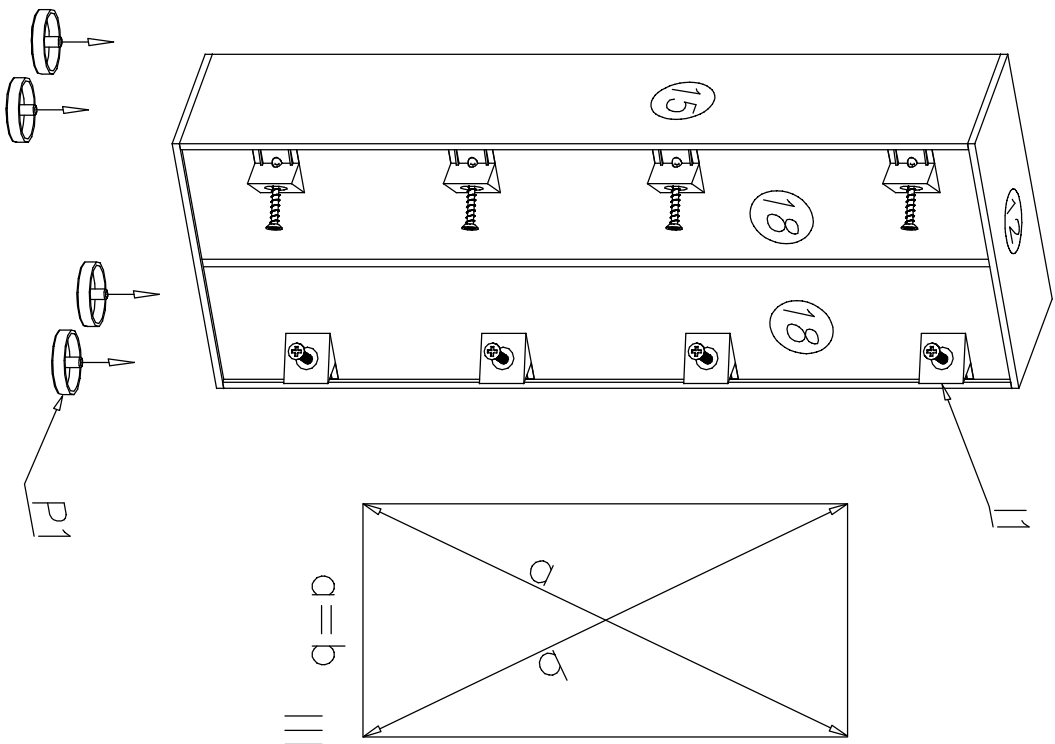

|||

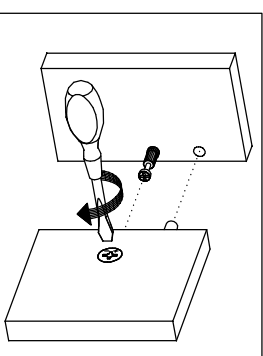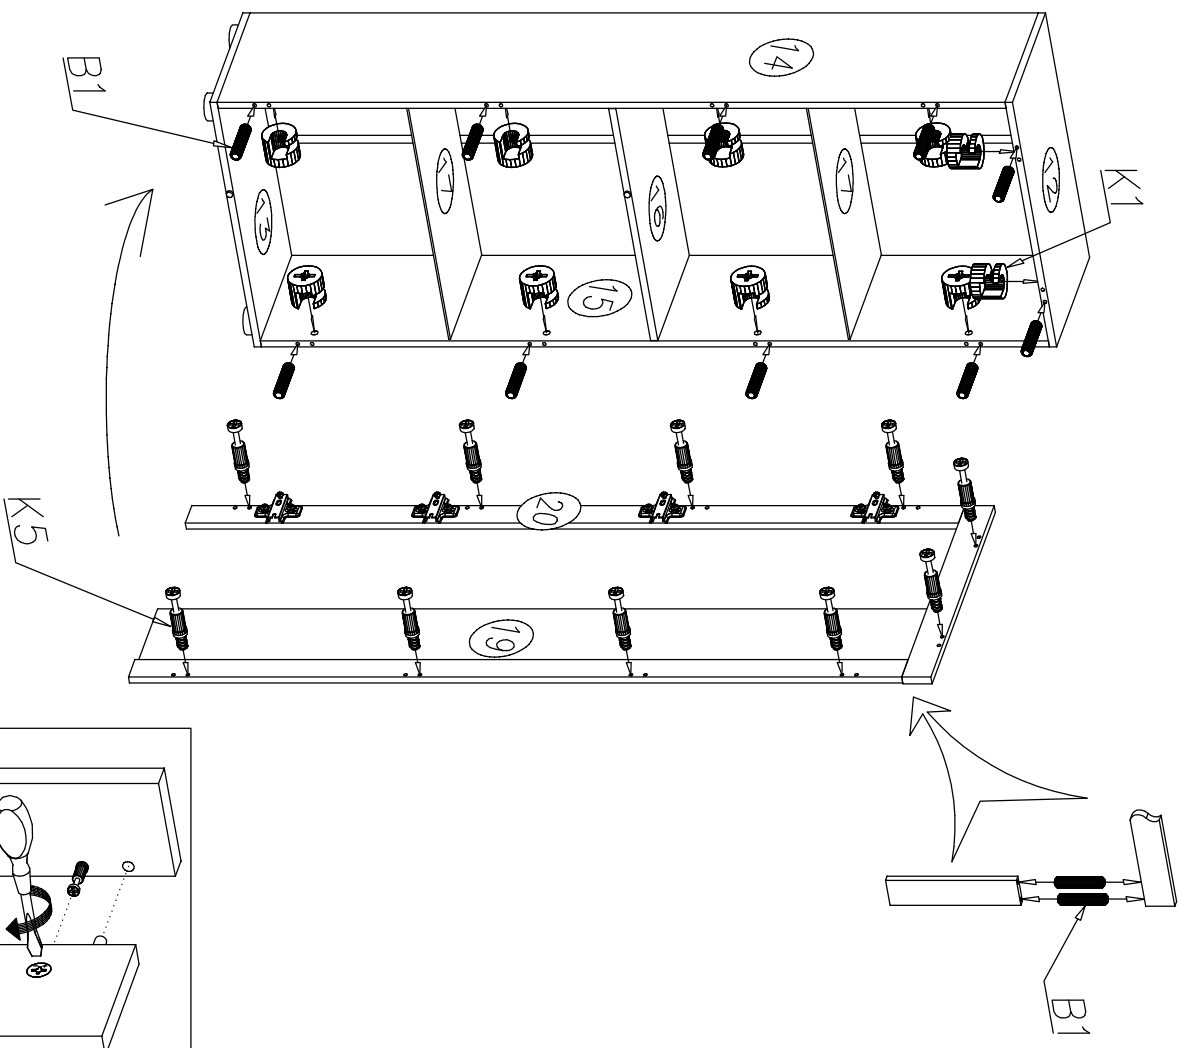

IV




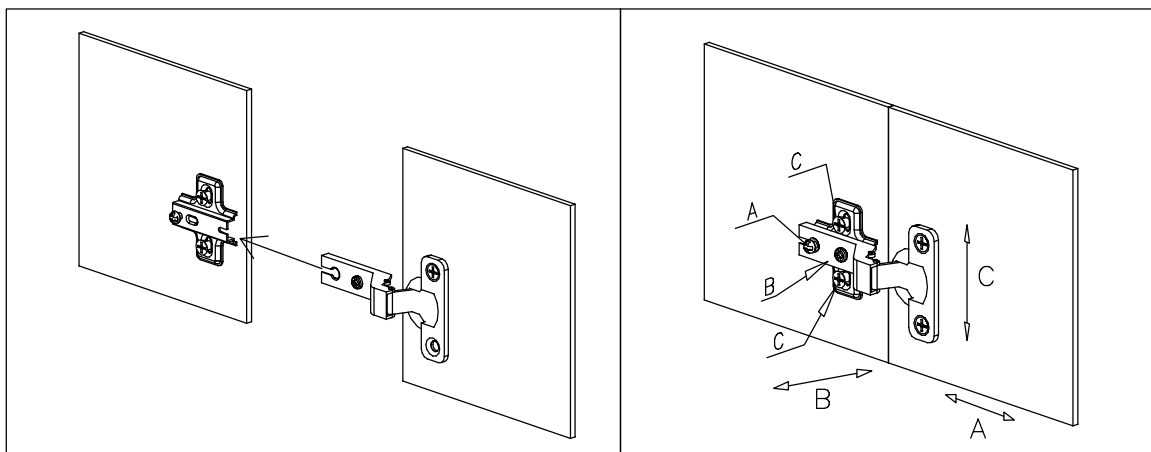
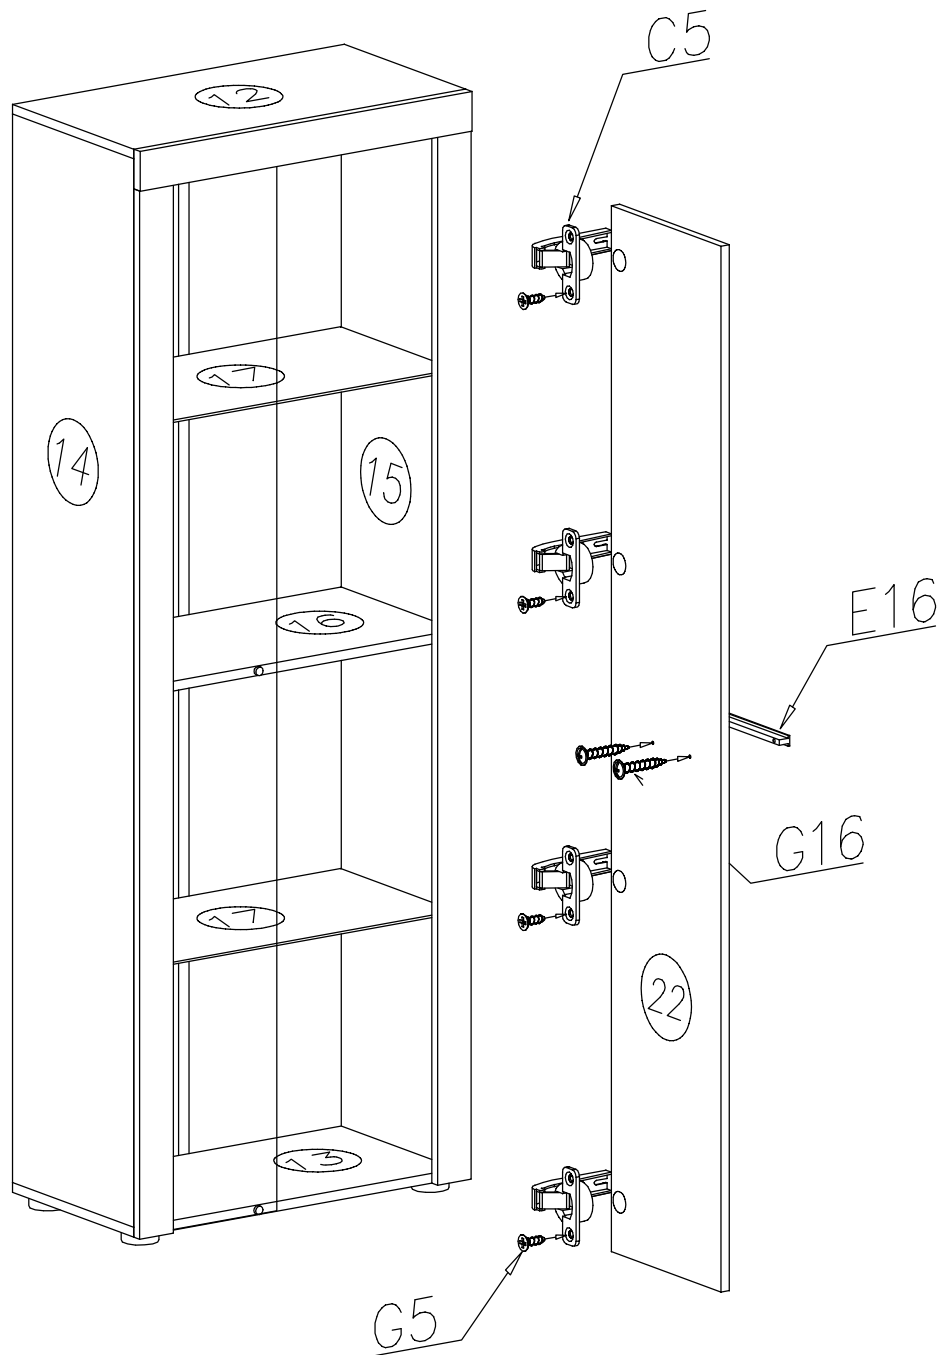


Strana

9/14

TAKO
< TC >


Montážny návod

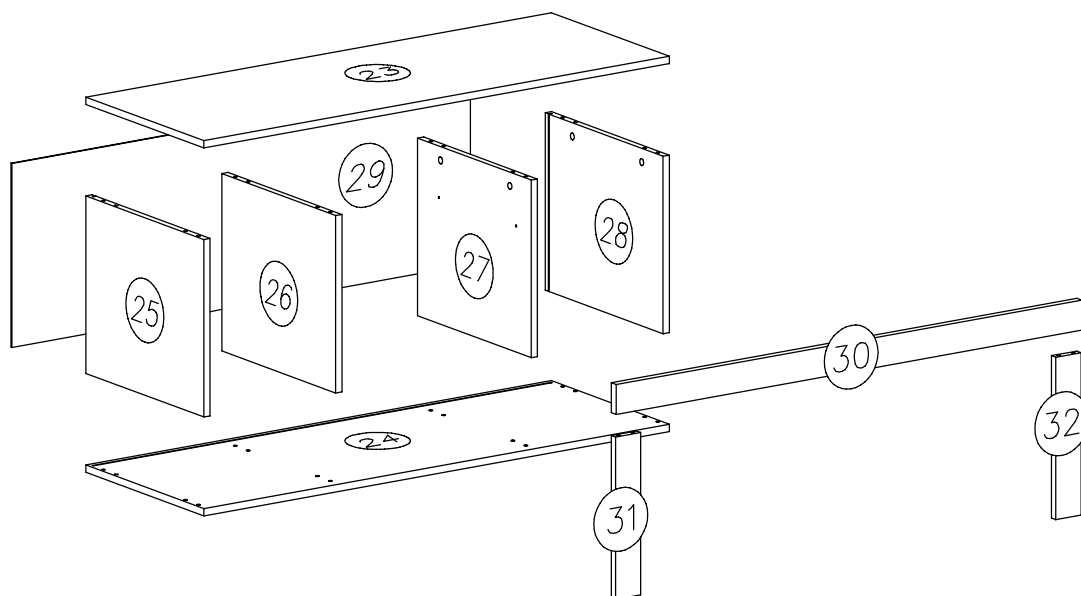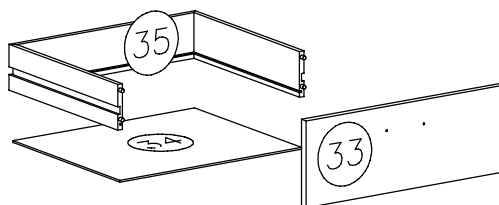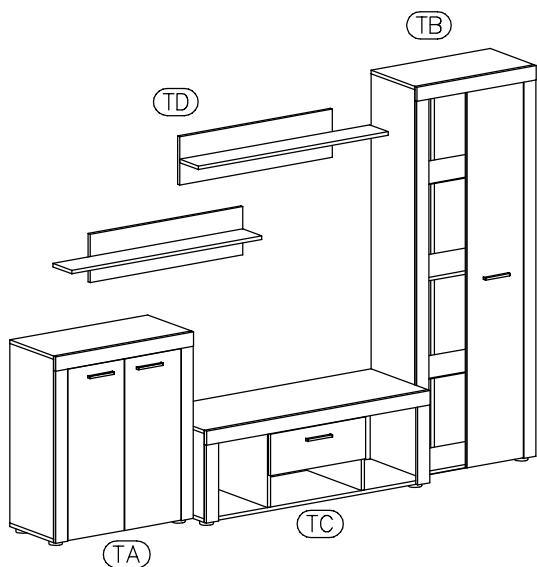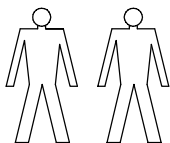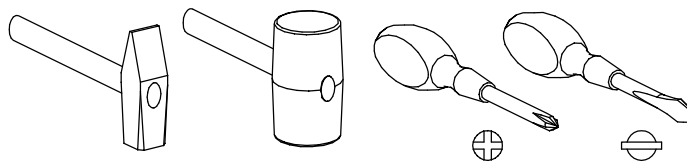

N1
M4 x 8 x2



A1
ø7 x 50 x8




E16
96mm x1




K1
ø15 x 12 x16



K5
x16




P1
x6




G1
4 x 13 x4



I1
x4




G16
4 x 27 x2




B1
ø8 x 35 x28







H5
400mm x2




W2
x1




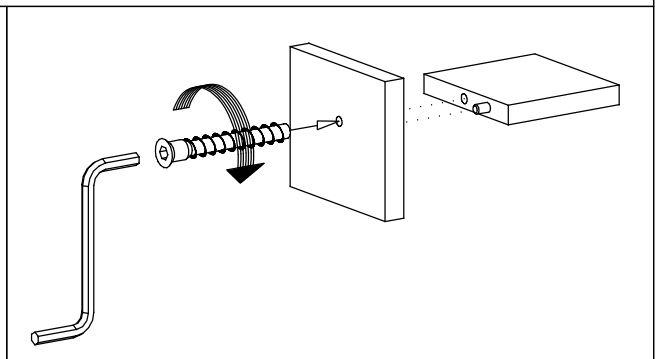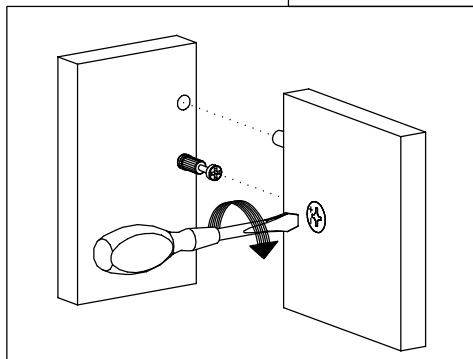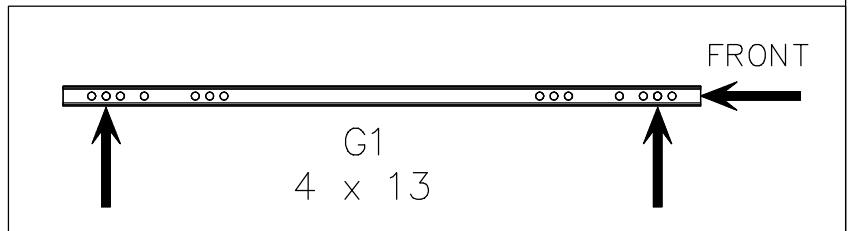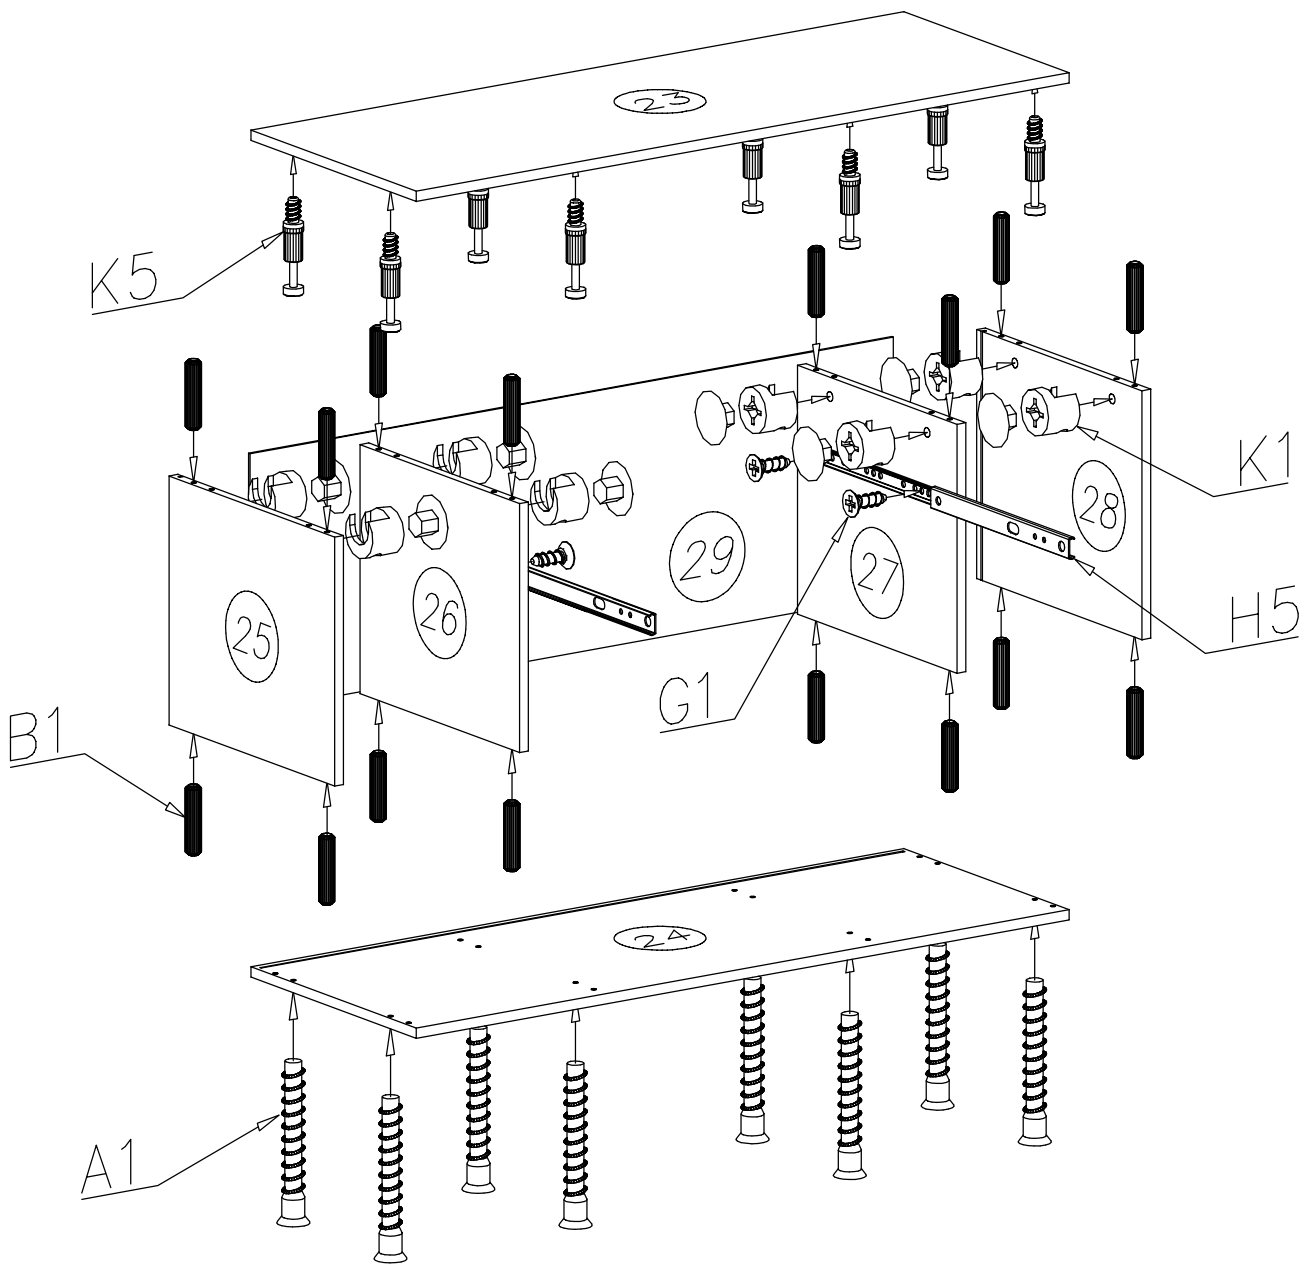

II

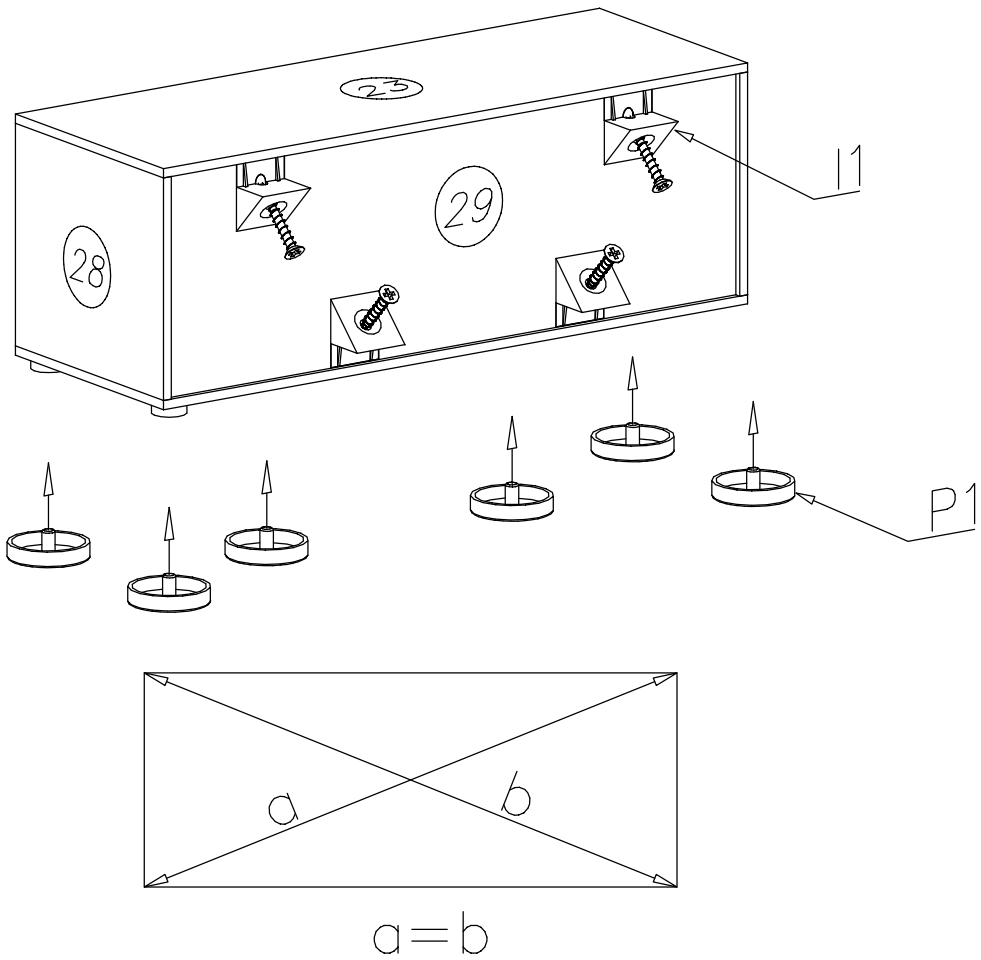

III

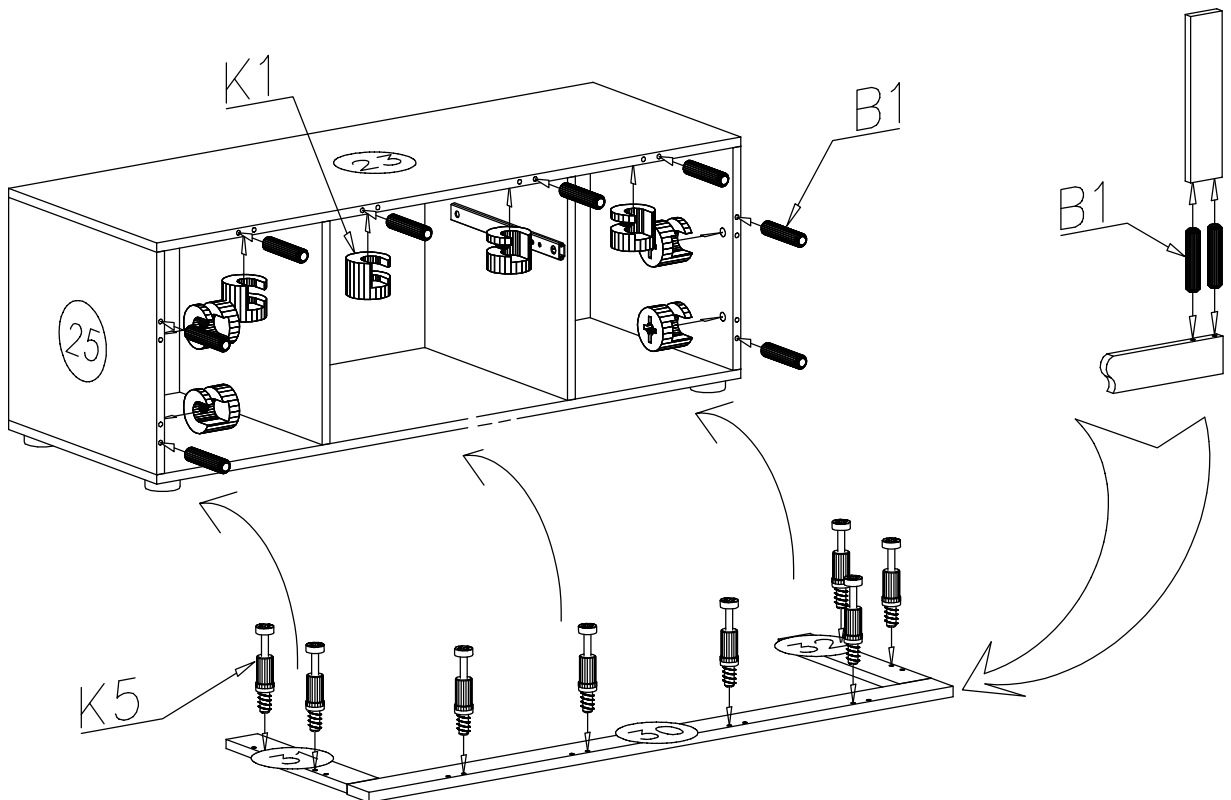

IV

